
## OPERATING INSTRUCTIONS RK PRECISION 731A ( THERMO ANEMOMETER

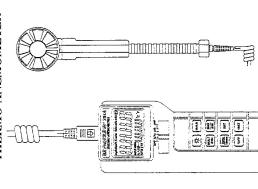

## MAX MIN Record Mode

ing mode. In the this mode the automatic power-off feature Press MIN/MAX button to enter the MIN MAX Recordis disabled and °C/°F button, UNIT button are disabled too, and the measurement period will set to 2 seconds.

MAX(maximum), MIN(minimum), MAX-MIN(maximum Push MIN MAX key to cycle through the minus minimum) and AVG(average) readings. In the this mode, press HOLD key to stop the recording of readings, all values are frozen, press again to restart Pressing and hold down the MIN MAX button for 2 seconds or pressing RESET botton to exit and erased recorded readings.

## 2 sec. / 16 sec. Average Mode

Pressing the 2sec/16sec button set the measurement period to 2 seconds. The "AVG 2" is displayed in the lower eft hand side corner of the display. The first reading will hold two seconds and flashs "2" annunciator, and then update every two seconds with average for the last two seconds. The default setting for the measuring period is 2

Pressing the 2sec/16sec button set the measurement period to 16 seconds. The "AVG 16" is displayed in the lower left hand side corner of the display. The first reading then update every two seconds with average for the last will hold sixteen seconds and flashs "16" annunciator, and sixteen seconds

# SPECIFICATIONS AND FEATURE

- A. Portable digital Thermo-Anemometer.
- Simultaneous display of both temperature and wind
- C. Memory of maximum, minimum and average record for
  - D. Air velocity average for multiple points both temperature and wind speed.

    - Auto power off function.
- F. 2 meters coiled cable and mounting nut for long extension.

#### GENERAL

Low battery indication: The " [ ] is displayed when the battery voltage drops below the operating level Accuracy: Stated accuracy at 23°C ± 5°C, <80% relative

Operating environment: 0°C to 50°C at <75% relative humidity humidity

Storage environment: -20°C to 55°C at <80% relative

Standard 9V battery (NEDA 1604, IEC 6F22 006P) Battery Life: humidity Battery:

200 hours typical with carbon zinc battery Dimensions: 770(H) x 65.5(W) x 35mm(D) Weight: 390g including battery and probe

## Multi Point Average Mode

- 1. Place the probe head in the area where air velocity is to be measured. The measurement is completed press the HOLD button enter the data hold mode, the anemometer held the present readings.
- 2. Press MAX MIN button, and the second display will show a count, this number represents the point that is being recorded.
- 3.Repeat this prosess until all desired points have been measure and recorded.
- the 4. Press MULTI POINT button will display the average air anemometer can recorded a total 8 points at one time, and velocity reading and nuber of points measured. average for the last 8 points.
- 5. Pressing and hold down the MULTI POINT button or pressing RESET botton for 2 seconds to exit and erased recorded readings, or pressing "HOLD" button to exit but not erased recorded reading

## TEMPERATURE

Femperature Scale: Celsius or Fahrenheit user-selectable Temperature Sensor: NTC

on -20°C to 0°C, 45°C to 60°C Measurement Range: -20°C to 60°C / -4°F to 140°F Measurement rate: 1 times per second. Resolution: 0.1°C/°F Accuracy: ±1.0°C

on -4°F to 32°F, 113°F to 140°F on 32°F to 113°F on 0°C to 45°C ±0.5°C  $\pm 2.0^{\circ}$ F ±1.0°F

Air Velocity

Meter: 0°C to 50°C (32F to 122°F) Vane: 0°C to 60°C (32F to 140°F) Operating Temperature: Mounting Nut: 1/4" x 20

## WIND VELOCITY

Range	0.05-0.0	0.0-5900	0.0-58.0	0.0-67.0	0.0-108.0	
Threshold	9.4	80	0.8	6.0	1.5	
Resolution	0.01		0.1	0.1	0.1	±3%FS
Units	s/m	ft/min	knots	. ųdu	Km/h	Accuracy: ±3%FS

# °C/°F Scale and Imperial/Metric Unit Change

The measuring scale of temperature are displayed in either degrees Celsius(°C) or degrees Fahrenheit(°F). To The default setting for the measuring unit is metric unit. change the temperature scale, press the °C/°F button.

The measuring unit of air velocity are displayed in either metric or imperial. To change the air velocity scale, press the UNIT button.

In degrees Celsius(°C), press UNIT button circulating selects the m/s (meters per second), Km/h (Kilometers per hour) and Knots.

In degrees Fahrenheit(°F), press UNIT button circulating selects the ft/m (feet per minute), mph (miles per hour) and Knots.

### **OPERATION**

- 1. Remove protetive cap.
- Set the power switch to "APO" or "ON"
- Press the °C/°F button to change the temperature scale.
- Read the display.
- Cover sensor head to extend sensor life when not in use.

# OPERATING INSTRUCTIONS

### Power Switch

"APO" will be turn on. The Auto-Power-Off mode turns the meter off automatically when the meter does not used for 10 Set power switch to APO position and LCDannunciator minutes. When power-off happens, turn the switch through OFF range turn on the power again.

When enters the RECORD mode, the Auto-Power-Off will be disabled automatically, and LCD annunciator "APO" will be turn off.

auto-power-off feature can be disabled by set power switch When the meter is to be used for long periods of time, the to ON position and LCDannunciator "APO" will be turn off.

#### Back-Light

Press "荣" button to turn the Back-Light on. To turn the Back-Light off press again.

### DATA HOLD

Pressing the HOLD key to enter the Data Hold mode, the "HOLD" annunciator is displayed. When DATA HOLD mode is selected, the anemometer held the present readings and stops all further measurements.

Pressing the HOLD key again cancels DATA HLOD hygrometer to resume taking mode, causing

## MAINTENANCE

## **Battery Replacement**

- 1. Power is supplied by 9V (NEDA 1604, IEC 6F22) battery.
  - remove the two screws from the back of the meter and replacement is needed. To replace the batteries, 2. The " [==== " appears on the LCD display when lift off the battery cover.
    - 3. Remove the batteries from battery contacts.
- 5. Don't keep in place with high Temp. or high humidity. 4. When not use for long time remove battery

#### Cleaning

Periodically wipe the case with a damp cloth and detergent, do not use abrasives or solvents